

Fissaid® Anti-Copy Mifare Card UID Wiegand Reader

Description:

Anti-Copy Mifare UID number read-only proximity card reader includes F6002 and F6034. They are intended primarily for use in access control system applications. F6002/F6034 reads the Mifare card identification number and transmits it to the access control system using the common Wiegand 26 bit interface or other interface requested by customers. **Anti-Copy function will reject to read the UID from copied Mifare card which is made by writable chip**, this way is making access control system much secure.

Model List/Picture/Wiring

		<p>Wiring:</p> <ul style="list-style-type: none"> Red: Power 9-15V Black: Power ground Green: Wiegand output D0 White: Wiegand output D1 Brown: Green LED control Blue: Buzzer control
<p>F6002 Size:121*46*22 mm Weight:60 gram</p>	<p>F6034 Size:121*46*22 mm Weight:200 gram</p>	

Specification:

Wide range power input	9-15VDC at 100mA, A linear regulator is recommended
Support card	Mifare Classic 1K, 4K, Mifare Ultralight, Mifare Desfire, Ntag, Mifare Pro
Interface	Wiegand26 / Wiegand34 is available on requirement
Read range	Mifare 4-8cm;
Frequency	13.56MHz
Operating temperature	-30°C to +60°C
Operating humidity	5%-95% (non-condensing)
Audio/Visual Indication	Green & Red LED and Buzzer signal output
Response Time	Less than 0.2 seconds
size	121*46*22mm
Weight	200 gram
Cable length	250mm

LED/Buzzer function description

LED function: The LED color is normally in RED. It starts with green/red flashes and will keep in RED. When the cards close to the reader, LED will flash green momentarily, this indicates cards were read properly. When LED control signal is activated by access controller host, LED will change to green till it is released to high again

Beeper Function: When Power up the reader, Beeper will ring 2 times. When the card close to the reader, a short beep will be emitted. This indicates that card was read properly.

Buzzer control line
when this control line is activated to lower by access controller host or connect to Ground line, buzzer will keep ringing until the line is released.

Green LED control line
when it is activated by access controller host or connect to ground line, Green LED will keep lighting until the line is released.

Anti-copy:
When copied mifare card is read, reader beeps two times, no wiegand output